

Kinetic Door Sensor



No Wires & Batteries Required

DESCRIPTION

Wireless Kinetic Door Sensor that employs micro-energy acquisition technology to provide battery-free installation


FEATURES & BENEFITS

Use as protective audible alarm on doors and windows
Works with the Lotus Doorbell Receiver
Pair multiple units together

INSTALLATION

Stick to door or window by the included 3M double double adhesive stickers, or screw the brackets and slide in

DIMENSIONS

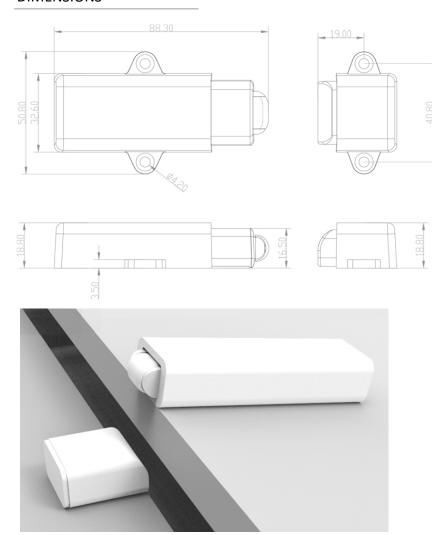

ORDERING GUIDE

Door Sensor LBL-KDS



Plug-in Receiver LBL-KDB-R1



Project:	
Location:	
Location.	
Qty:	
Natas	
Notes:	

SPECIFICATION		
Applications	Home Security, Elderly Care, Energy Management	
Power mode	Kinetic Self-Powered	
Frequency	433 MHz	
Operating Temperature	Receiver: -15°C to + 45°C (5°F to 113°F)	
Operation Range	100 feet indoor / 160 feet outdoor	
Pairing Capacity	up to 100 receivers to 1 sensor	
	up to 10 sensors to 1 receiver	
Approved Location	Indoor	
Life	100,000 pressings	
Certifications	FCC	
Warranty	2 Year	



Door Sensor Manual

Pairing to the Doorbell Receiver:

- 1. With the door sensor mounted and door or window closed, press the ringtone selection key for 3 seconds and release when the indicatior light starts blinking. Make sure the door sensor is engaged.
- 2. Open the door or window to release the door sensor. The indicator light on the receiver will turn off and pairing is complete. Chime will sounds when the sensor is released (opening the door)
- 3. In case you want the chime to sound when the sensor is pressed (door is closing), pair the sensor to receiver while sensor is not engaged.
- 4. You can pair the door sensor both ways and sound will chime when door is opened and closed.

Silent Mode (no sound, only light blinking):

To activate Silent Mode, press the Ringtone Selection Key for 8 seconds and release when the indicator light stops blinking and is constantly on To deactivate Silent Mode: repeat the above steps

Deleting Pair:

The pairing will be deleted by pressing the Ringtone Selection Key for 10 seconds until the indicator light stops blinking and is constantly on

Please note that Sensor and Receiver should be ordered together. Sensor does not work without the receiver. Multiple units of each could be paired.

Lotus LED Lights USA	www.LotusLEDLights.com	Lotus LED Lights CANADA
250 H Street # 301, Blaine WA 98230 tel 360-200-5500	mailing addresses	1080 Cliveden Ave # 6, Delta BC V3M 6J6 tel 604-538-3090
Hainesport NJ, Naples FL, Vancouver WA	warehouses	Delta BC & Mississauga ON