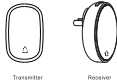
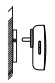
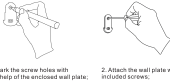




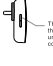


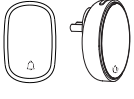
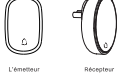
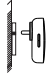







 <p><b>Wireless Kinetic Doorbell</b> LBL-KDB-1 <b>User Guide</b></p>	<p><b>Introduction:</b> This Wireless Kinetic doorbell employs micro-energy acquisition technology to provide battery-free installation and use. The ease of installation, IP67 waterproof rating, and various ring tones, make the kinetic Door Bell the ideal choice.</p>  <p>Transmitter Receiver</p> <p><b>Specifications:</b> Model: LB-KDB-1 Volume Levels: 4 Ringtone: 28 Operation Range: 30m Waterproof Rating: IP67 Frequency: 433MHz Rated Voltage: AC 100-240V 50Hz 50/60Hz Work Temperature: Receiver: -10°C ~ +50°C Transmitter: -40°C ~ +55°C Material: energy no direct model Pairing Capacity: Pair up to 100 receiver to 1 transmitter and up to 10 transmitter to 1 receiver</p>	<p><b>Receiver Installation:</b> Plug the Receiver directly into an indoor wall socket. It will ring once after activation. The Receiver is to be used indoors only. Avoid dusty, high temperature, high humidity and strong magnetic field environments.</p>  <p><b>Transmitter Installation:</b></p>  <p>1. Mark the screw holes with the help of the enclosed wall plate. 2. Attach the wall plate with the included screws.</p>	 <p>3. Attach the Transmitter onto the wall plate by sliding it top-down.</p> <p>To remove the Transmitter from the wall plate, please use a small screwdriver to push into the small hole at the bottom of the Transmitter and then pry upwards lightly. The Transmitter will slide up and out of the wall plate.</p> 	<p><b>Receiver Keys' Functions:</b></p>  <p>Ringtone Selection Key Volume Key</p> <p><b>Pairing:</b> The Transmitter and Receiver in your package are already paired. If once then one Transmitter or Receivers are required to be paired, please follow the below steps:</p>  <p>1. Long-press the Ringtone Selection Key for 3 seconds, and release when the indicator light starts blinking. 2. Press the Transmitter once, the light on the Receiver will go OFF, and the pairing will be complete.</p>	<p><b>How to Delete a Pair:</b></p>  <p>The pairing will be deleted by long-pressing the Ringtone Selection Key for 10 seconds until the indicator light stops blinking and stays constantly On.</p> <p><b>Silent Mode:</b></p>  <p>To indicate the Silent mode, long-press the Ringtone Selection Key for 8 seconds and release when the indicator light stops blinking and stays constantly On. Repeat the above step to ON-activate Silent Mode.</p> <p>1. Long-press the Ringtone Selection Key for 3 seconds, and release when the indicator light starts blinking. 2. Press the Transmitter once, the light on the Receiver will go OFF, and the pairing will be complete.</p>	<p><b>Important safety instructions</b> Danger – To reduce the risk of fire or electric shock, carefully follow these instructions. For connecting outside of North America please use proper adapter for the power outlet. Risk of electric shock Do not touch the plug. The plug is used as disconnect device. The cord should not be open under any circumstances. If the cord is damaged, the device should not be used. Children should be supervised to ensure they do not play with the device.</p> <p><b>FCC Statement</b> This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio/television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: *Reorient or relocate the receiving antenna. *Increase the separation between the equipment and receiver. *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. *Consult the dealer or an experienced radio/TV technician for help. This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.</p>	
 <p><b>Commutateur cinétique sans fil</b> LBL-KDB-1 <b>Guide de l'utilisateur</b></p>	<p><b>Introduction:</b> Ce commutateur cinétique sans fil utilise la technologie d'acquisition de micro-énergie pour offrir une installation et une utilisation sans batterie. La facilité d'installation, l'indice d'étanchéité IP67 et les différentes sonneries font du Commutateur de porte sans fil le choix idéal.</p>  <p>L'émetteur Récepteur</p> <p><b>Spécifications:</b> Modèle: LBL-KDB-1 Niveau de volume: 4 Sonneries: 28 Portée de fonctionnement: 30m Classe d'étanchéité: IP67 Fréquence: 433MHz Tension nominale: AC 100-240V 50/60Hz Température de fonctionnement: Émetteur: -40°C ~ +55°C Récepteur: -10°C ~ +50°C Énergie mécanique, aucune alimentation nécessaire Capacité de jumelage: jumeler jusqu'à 100 récepteurs à 1 émetteur et jusqu'à 10 émetteurs à 1 récepteur</p>	<p><b>Installation du récepteur:</b> Branchez le récepteur directement dans une prise murale intérieure. Il sonnera une fois après l'activation. Le récepteur ne doit être utilisé qu'à l'intérieur. Évitez les environnements poussiéreux, à haute température, à forte humidité et à champ magnétique élevé.</p>  <p><b>Installation de l'émetteur:</b></p>  <p>1. Marquer les trous des vis à l'aide de la plaque murale fournie. 2. Fixer la plaque murale avec les vis incluses.</p>	 <p>3. Fixer l'émetteur sur la plaque murale en le faisant glisser vers le bas.</p> <p>Pour retirer l'émetteur de la plaque murale, utiliser un petit tournevis pour pousser dans le petit trou au bas de l'émetteur, puis pousser légèrement vers le haut. L'émetteur glissera vers le haut et hors de la plaque murale.</p> 	<p><b>Fonctions des touches du récepteur:</b></p>  <p>Touch de sélection de sonnerie Touch de volume</p> <p><b>Jumelage:</b> L'émetteur et le récepteur de votre colis sont déjà jumelés. Si plusieurs émetteurs ou récepteurs doivent être jumelés, suivez les étapes ci-dessous.</p>  <p>1. Appuyez longuement sur la touche de sélection de sonnerie pendant 3 secondes puis relâchez lorsque le voyant s'éteint. 2. Appuyez une fois sur l'émetteur. Le voyant lumineux du récepteur s'éteindra et le jumelage sera terminé.</p>	<p><b>Comment supprimer un jumelage:</b></p>  <p>Le jumelage sera supprimé en appuyant longuement sur la touche de sélection de sonnerie pendant 10 secondes ou jusqu'à ce que le voyant s'arrête de clignoter et reste constamment allumé.</p> <p><b>Mode silencieux:</b></p>  <p>Pour indiquer le mode silencieux, appuyez longuement sur la touche de sélection de sonnerie pendant 8 secondes et relâchez lorsque le voyant s'arrête de clignoter et reste constamment allumé. Répétez l'étape ci-dessus pour désactiver le mode silencieux.</p>	<p><b>Consignes de sécurité importantes</b> Danger – Pour réduire le risque d'incendie ou de choc électrique, suivez attentivement ces instructions. Pour un raccordement à l'intérieur de l'Ambassade du Nord, veuillez utiliser l'équipement approprié pour la prise de courant. Risque de choc électrique Pour usage intérieur seulement. La fiche doit être utilisée comme dispositif de déconnexion. Le commutateur ne doit être utilisé que lorsqu'il est ouvert. Si le couvercle est endommagé, l'appareil ne doit pas être utilisé. Les enfants devraient être supervisés pour s'assurer qu'ils ne jouent pas avec l'appareil.</p>	